



*Ensure Maximum POWER HAWK® P-16 Rescue System Performance Through Proper Maintenance & Care...*

## **“Mission Ready” Maintenance Plan**



### ***P-16 Rescue System Factory Tune-up Service***

---

**Service includes:**

**For the P-16 Rescue Tool, PC-100 Controller Unit, CA-4M Power Cable:** Inspect all system components for damage and repair or replace items to ensure performance meets specification. Install new 12 volts DC Motor. Install new power cable pigtail assembly. Replace clutch stop screw, seals, thrust bearing, decals, fasteners and more. Re-grease gearboxes and chain drives. Re-paint front and rear handles.

**For the AP-1600 Attachment Pins:** Inspect pins, ball-detents and tether cables. Repair as necessary.

**For the S-1601 Spreader Arms:** Inspect for excessive damage or cracking. Sharpen serrations where appropriate. Touch-up paint.

**For the C-1601 Curved Cutter & CS-1602 Power Blade:** Inspect blades for excessive damage or cracking. Remove burrs from blades and sharpen where appropriate. Replace cutter nut. Inspect cutter stop and tether cable. Repair as necessary.

**For the PWR-3X12 Power Pack:** Check case for excessive damage or cracking. Check test button and indicator. Check battery integrity.

**Contact your local  
Power Hawk Representative  
or call the Factory at 1-800-PWR-HAWK  
to schedule an appointment**

